

Dejero

Resilient Mode

 
For Broadcast and Media



In the event of a temporary service interruption to Dejero Control, Resilient Mode is a built-in failsafe that ensures uninterrupted live shots from the field.

What it Does

By constantly monitoring the health of the connection with the Dejero Control infrastructure, Dejero transmitters are designed to automatically enable Resilient Mode if Control becomes unexpectedly unavailable. This allows field crews to go live, transfer clips or files, and communicate via IFB and Intercom, unaffected by an outage.

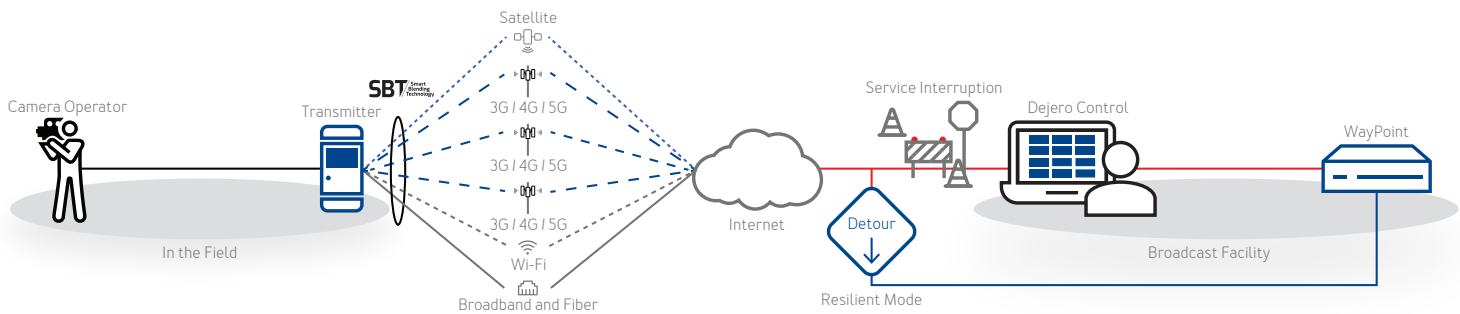

What it Delivers



Failsafe back-up plan

Uninterrupted live broadcasts from mobile transmitters in the event of a loss of connection with Dejero Control.



Automatic and uncomplicated solution

Backup solution is triggered automatically so field crews can carry on with their shot without any manual intervention necessary.



Trusted connectivity partner

Because everyone needs a back-up plan, Dejero makes sure field crews always stay connected and never miss a live shot.

Resilient Mode will automatically send a live video feed to the last known receiver assignment or give the option to select from the last 10 used assignments.



Supported Devices

Mobile Transmitters	GoBox, EnGo 1.x, EnGo 260
Rack Transmitters	VSET, PathWay EC
Encoders	PathWay E
Transceivers	FlexPoint 111

System Requirements

Core 5.1 or later	Contact Dejero Support to schedule an update
-------------------	--